

LINETRAXX® VMD460-NA

Network and system protection (NS protection) for monitoring
the network feed-in from generating plants





LINETRAXX® VMD460

Device features

- Straightforward commissioning by means of default basic programs for national standards and guidelines
- Single-fault tolerance
- Monitoring of the connected coupling switches (configurable: NC/NO/off)
- Islanding detection df/dt (ROCOF)
- Vector shift
- RS-485 interface, BMS bus (data exchange/parameter setting)
- Test function to determine the switch-off time
- Test button for the trigger circuit
- The last 300 network faults can be recalled with time stamp/real-time clock
- Continuous monitoring of the phase voltage and line-to-line voltage
- Special connection conditions after a limit value violation
- Language selection (German, English, Italian)
- Backlit graphic LC display
- Password protection for device setting
- Remote trip/remote switch-off via ripple control signal receiver
- Sealable enclosure

Standards

- UL 508
- CSA (22.2 No. 14-13)

Product description

The VMD460-NA is intended for protecting the network and the (generating) plant from inadmissible operating states and disconnecting them. For this purpose, the VMD460-NA is designed according to the single-fault tolerance principles.

If the switch-on conditions or (re-)connection conditions are fulfilled, the VMD460-NA enables the coupling of the generating plant to the network.

Details are regulated by the applicable (application) standards and guidelines.

The country-specific (application) standards and guidelines are stored in the device as selectable basic programs.

Application examples

- Central NS protection (VDE-AR-N 4105)
- Protective disconnection (VDE-AR-N 4110, BDEW)
- Interface Protection (IP) (Engineering Recommendations; EREC G99, G59, G83, G59)
- Protezione di interfaccia (CEI 0-21)
- Automatic disconnection device between a generating plant parallel to the network and the public network
- Universal for generating plants for safe network decoupling

Functional description

Network disconnection (switch-off) occurs when at least one of the activated protective or monitoring functions is triggered.

If the switch-on conditions or (re-)connection conditions are fulfilled, the VMD460-NA enables the coupling of the generating plant to the network.


Details are regulated by the applicable (application) standard and guideline.

The following monitoring and protective functions are implemented in the VMD460-NA:


- Voltage protection functions
 - Rise-in-voltage protection: $U>$, $U>>$
 - Under-voltage protection: $U<<$, $U<$
- Frequency protection functions
 - Rise-in-frequency protection: $f>$, $f>>$
 - Under-frequency protection: $f<<$, $f<$
- Islanding detection:
 - df/dt (Rate of Change of Frequency; ROCOF)
 - Vector shift detection
- Unbalance detection
- Monitoring of the trigger circuits and coupling switches by means of contact feedback
- Remote trip/remote switch-off (e.g. via ripple control signal receiver)
- Test function (test button) for testing the trigger circuit, the coupling switch and for determining the switch-off times
- Automatic self test

Approvals/certificates of conformity/manufacturer declarations


- VDE-AR-N 4105:2018-11
- VDE-AR-N 4105:2011-08
- VDE-AR-N 4110:2018-11
- BDEW technical guideline 2008 incl. amendments until 01.2013
- G99/1:2019
- G59/2
- G59/3
- G98/1:2019
- G83/2
- CEI 0-21 (:2012-06, :V1:2012-12, :V2:2013-12, :2014-09, :V1:2014-12, :2016-07, V1:2017-07)
- C10/11:2012-06
- DIN V VDE V 0126-1-1(2016-06, /A1:2012-02)

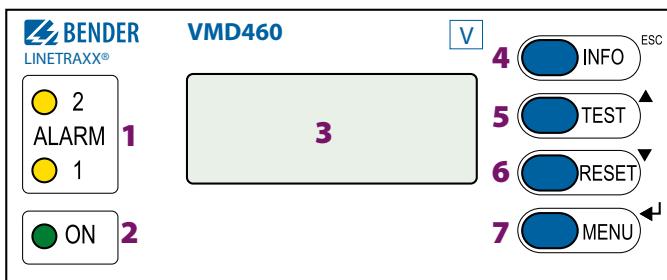Operating elements


- 1 - Both alarm LEDs "AL1" and "AL2": light up in case of a limit value violation of voltage and frequency.
- 2 - "ON" LED (green): lights when the voltage supply is available and the device is in operation or flashes in case of a system error message (external watchdog).
- 3 - Backlit LC display
- 4 - "INFO" button
- 5 - Use the "TEST" button to run a manual self test which triggers both alarm relays (trigger test to check the coupling switches). In addition, fault simulation will be carried out with documentation of the switch-off time.
- 6 - "RESET" button: acknowledge alarm and fault messages.
- 7 - "MENU" button: toggle between the standard display, menu and alarm display.

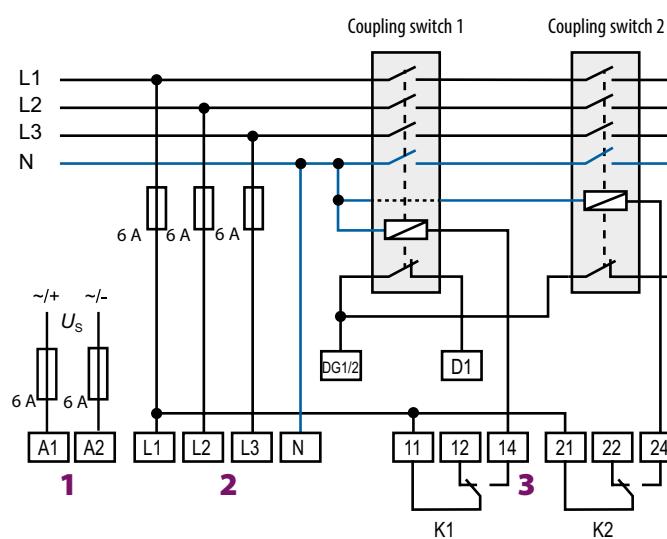Wiring diagram VMD460 (VDE-AR-N-4105)


- | | |
|----------------------|---|
| 1 - A1, A2 | Supply voltage U_s
(see ordering details) |
| 2 - L1, L2, L3, N | Power supply connection |
| 3 - K1, K2 | Relay connections |
| 4 - DG1/2,
D1, D2 | Contact monitoring,
coupling switch
DG1/2: GND
D1: Feedback signal
contact K1
D2: Feedback signal
contact K2
(feedback signal contacts
optionally NC/NO/off)* |
| 5 - RTG, RT1 | RTG: GND
RT1: Remote trip input
(optionally NC/NO/off)* |
| 6 - A, B | Service interface |
| 7 - $R_{on/off}$ | Activate or deactivate the
terminating resistor of the
BMS bus (120 Ω) |
- * NO (in non-operating state open)

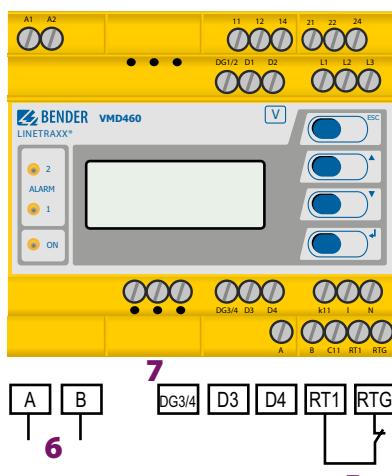


Wiring diagram VMD460 (4110)




Within the scope of VDE-AR-N 4110:2018-11, the VMD460-NA can be used as protective disconnection device for the generating unit or as higher-level protective disconnection, the latter, however, only if the Q-U protection function may be dispensed with. According to VDE-AR-N 4110:2018-11 chapter 10.3.3.4 par. 5, this is possible after consultation with the network operator and under the following conditions:

- Generating plants with limited dynamic network support or
- Generating plants < 1 MVA

Both types of application are possible when the generating plant is connected to the busbar of a substation (MV-busbar) or when the generating plant is connected to the medium-voltage network (MV-network).

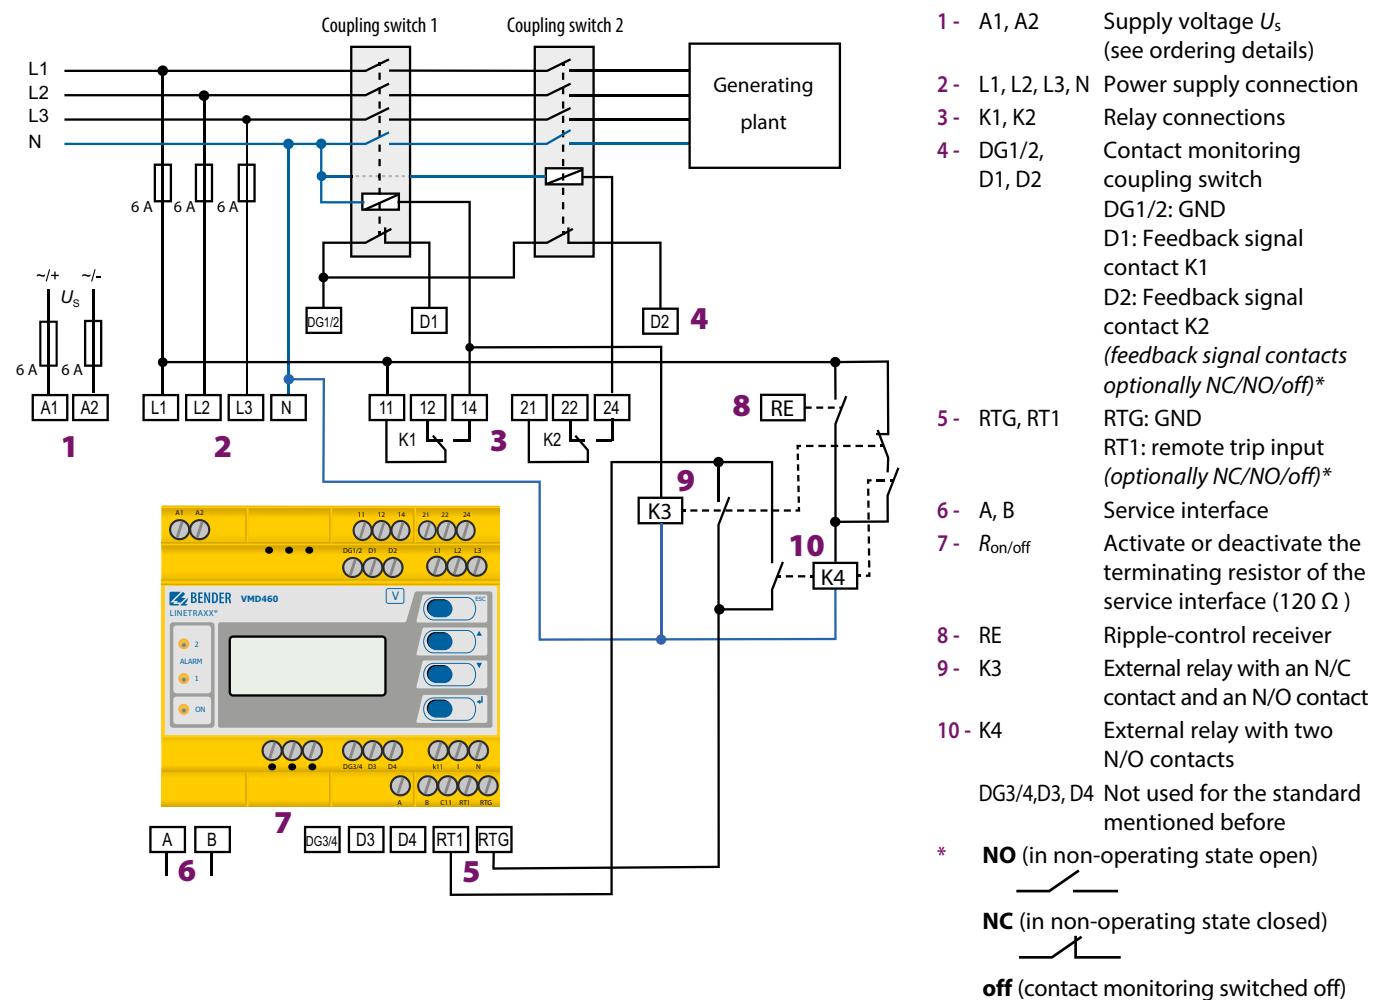

Wiring diagram VMD460 (CEI 0-21)

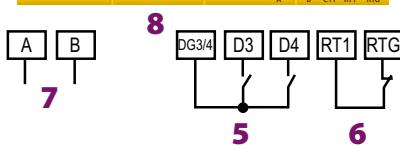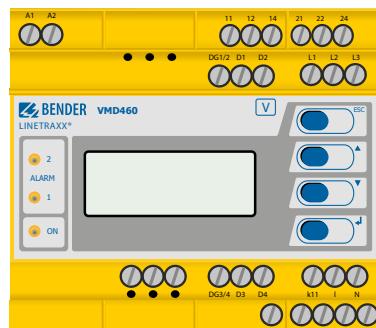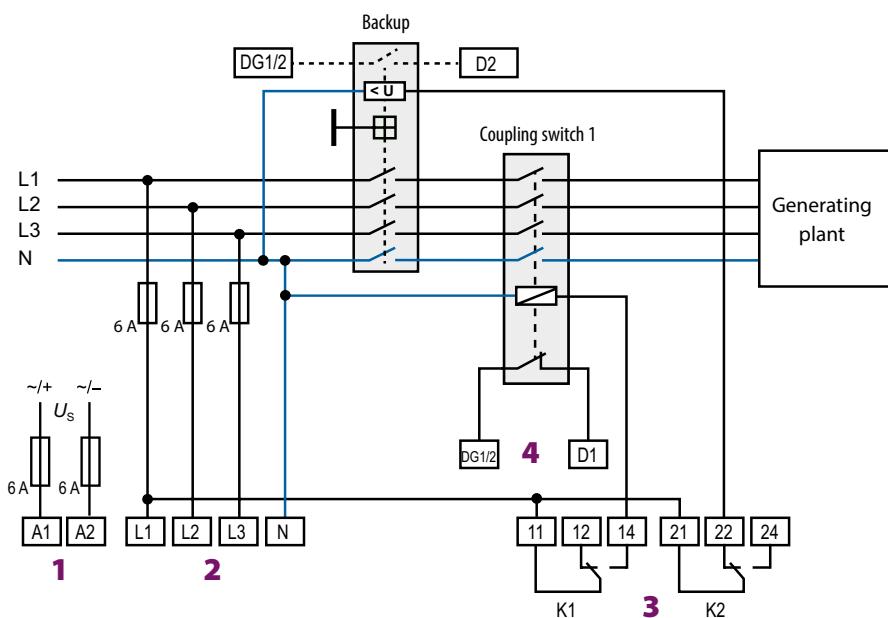


- 1 - A1, A2:** Supply voltage U_s (see ordering details)
- 2 - L1, L2, L3, N:** Power supply connection
- 3 - K1, K2:** Relay connections
- 4 - DG1/2, D1, D2:** Contact monitoring, coupling switch
- DG1/2: GND**
- D1: Feedback signal contact K1**
- D2: Feedback signal contact K2**
- (feedback signal contacts optionally NC/NO/off)***
- 5 - DG3/4, D3, D4:** Digital inputs (external monitoring)
- DG3/4: GND**
- D3: local control (CEI 0-21 8.6.2.1.1)****
- D4: external signal (CEI 0-21 8.6.2.1.2)** (optionally NC/NO/off)***
- 6 - RTG, RT1:** RTG: GND
RT1: Remote trip input (optionally NC/NO/off)*
- 7 - A, B:** Service interface
- 8 - $R_{on/off}$:** Activate or deactivate the terminating resistor of the BMS bus (120Ω)

* NO (in non-operating state open)




NC (in non-operating state closed)

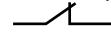

off (contact monitoring switched off)

** In order to evaluate the inputs D3 and D4, the mode can be adjusted correspondingly in the menu (menu: 3. Settings -> 1. General -> 4. Mode)

Intended use

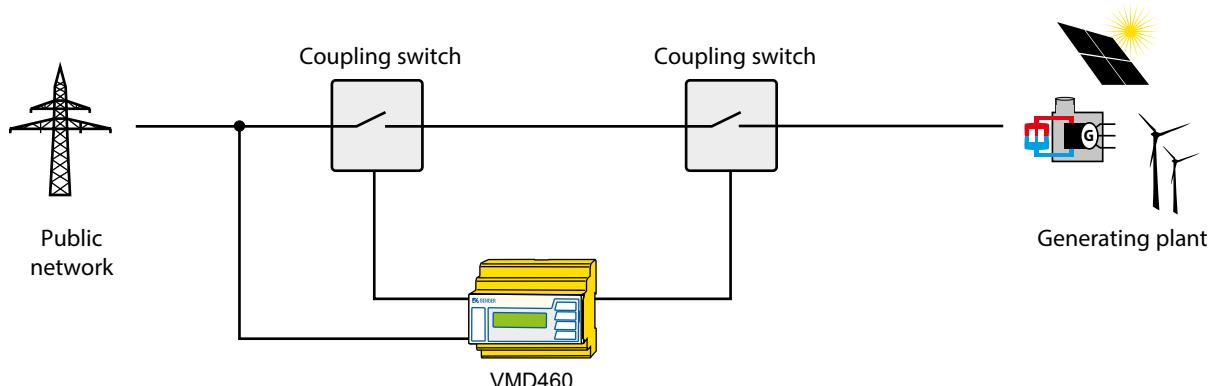

Principle of a plant according to CEI 0-21; VDE-AR-N 4105 (ab 30 kW), C10/11, BDEW technical guideline, DIN V VDE V 0126-1-1/A1, G59/2, G59/3, G83/2

Ordering details

Supply voltage U_s	Type	Art. No.
AC/DC		
100...240 V	VMD460-NA-D-2	B93010045


Device version with push-wire terminals on request.

Accessories

Name	Art. No.
Mounting clip for screw mounting (1 piece per device)	B98060008

Dimension diagrams

Dimensions in mm

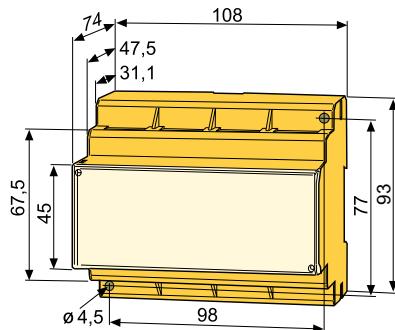



Optec AG | Guyer-Zeller-Strasse 14 | CH-8620 Wetzikon ZH

Telefon: +41 44 933 07 70 | Telefax: +41 44 933 07 77
E-Mail: info@optec.ch | Internet: www.optec.ch



Bender GmbH & Co. KG

P.O. Box 1161 • 35301 Grünberg • Germany
Londorfer Straße 65 • 35305 Grünberg • Germany
Tel.: +49 6401 807-0 • Fax: +49 6401 807-259
E-mail: info@bender.de • www.bender.de



BENDER Group